 
 



## 4GB Music & Video Player

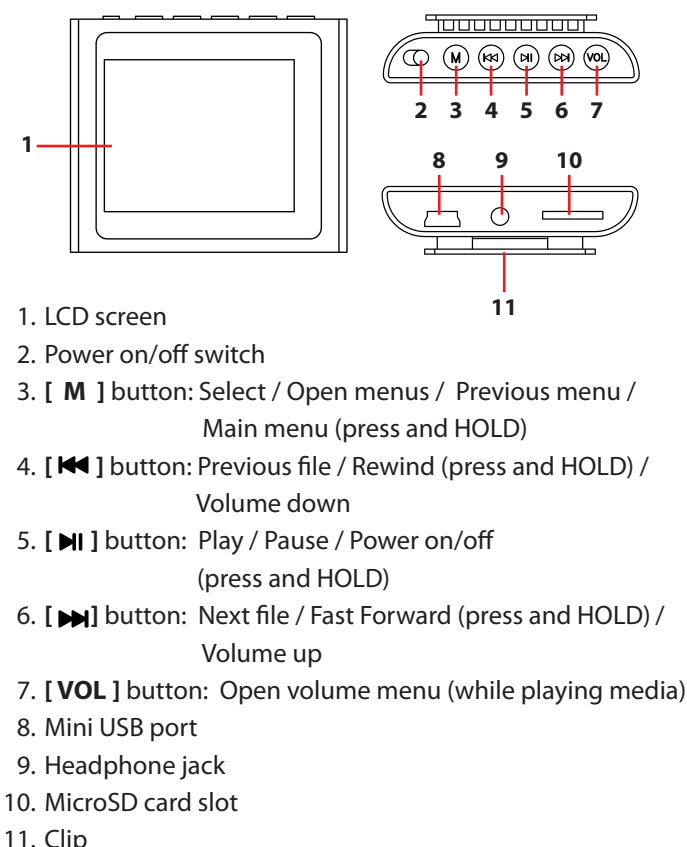

**User Guide**  
MP518-4

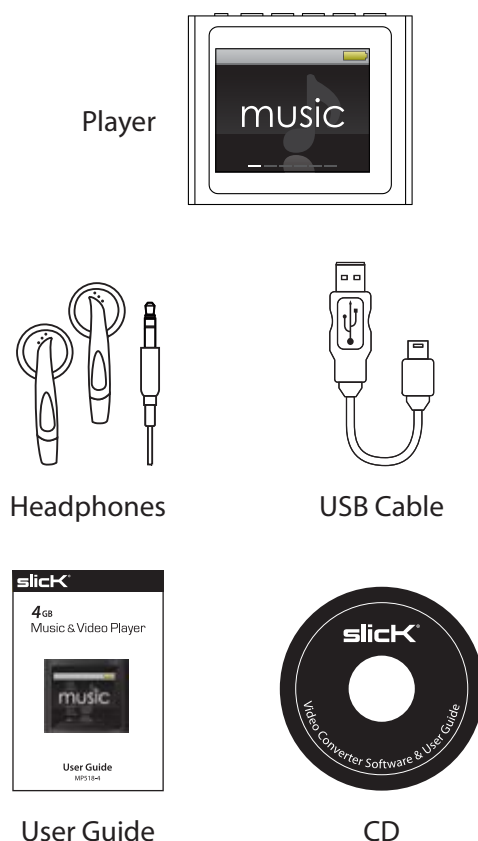

 - Slide the **[POWER]** switch to the **ON** position.  
**Note:** The player will not charge while the **[POWER]** switch is in the power OFF position.
- Connect the player to your computer using the included USB cable.
- Charge the battery between 3-5 hours. Do not charge for more than 8 hours.
- The battery icon in the lower right corner of the charging screen is the charging indicator. It will move while charging and remain solid green when finished charging.

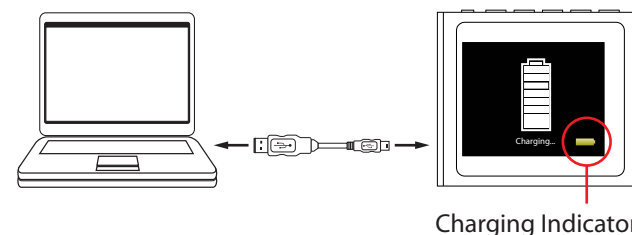

**Battery level indication:**  
 - indicates that the battery is full.  
 - indicates low battery; the player should be charged as soon as possible.

**IMPORTANT:** Charge the player for at least 8 hours before using it for the first time.

## Basic operation

 
## Main menu

## Micro SD card

### Turning on/off


Make sure the MP3 player is fully charged before turning it on.

- To turn on the player, make sure the **[POWER]** switch is in the **"ON"** position. If it is already in the **"ON"** position, then press and **HOLD** the **[⏸]** button until the display lights up.
- To turn off the player, press and **HOLD** the **[⏸]** button until the display shuts off or slide the **[POWER]** switch to the **"OFF"** position.

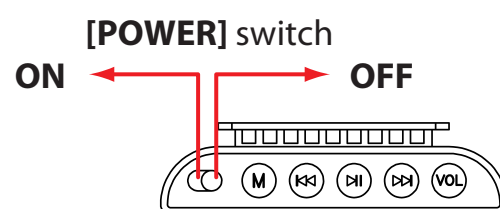

### To navigate the main menu

 
- [⏮]** move the selection left to the previous option
- [⏭]** move the selection right to the next option
- [M]** confirm the selection

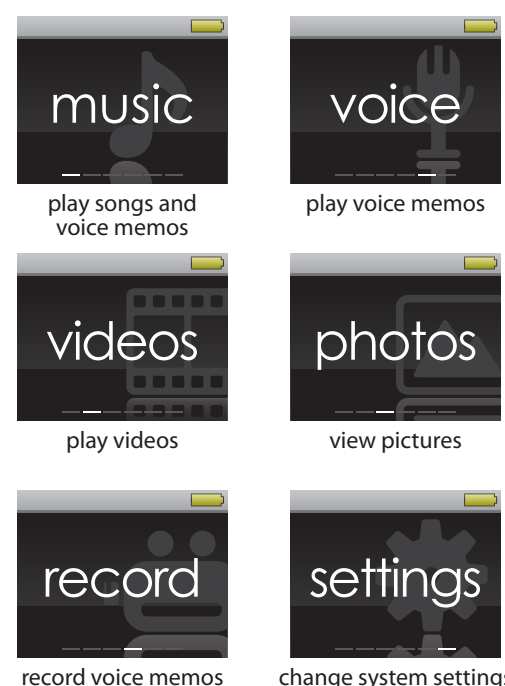

The player supports Micro SD cards (not included), which allow you to add up to 8GB of additional memory to the player.

To insert the Micro SD card:

 - Insert the Micro SD card into the card slot with the metal contacts facing up towards the front of the player, and gently push it in until it clicks. Do not apply excessive force, as this may damage the player and Micro SD card.
- To remove the Micro SD card, gently push it in until it pops out.

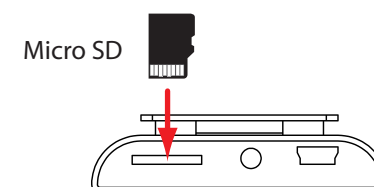


- Do not use force while inserting or removing the Micro SD card.
- Do not remove the card during file transfers.
- Make sure the player is turned off before inserting or taking out the card.



## Transferring media files to the player

 
## Music

- Find music, picture, or video files on your computer.

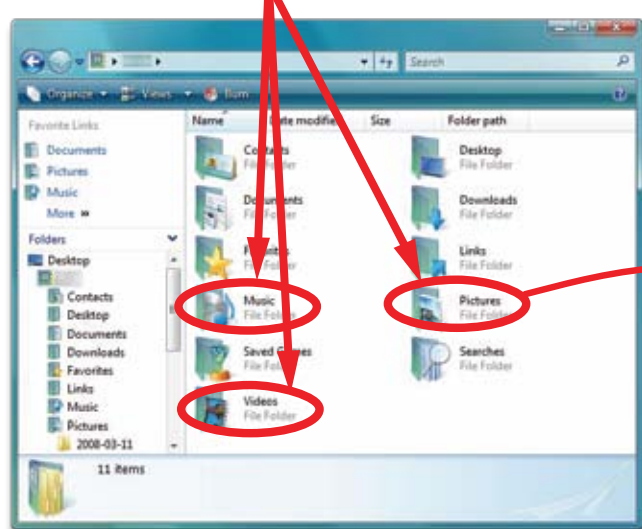

**IMPORTANT:** Do not disconnect the MP3 Player from the PC while transferring files as doing so will damage the MP3 Player and your files.

 - Connect the MP3 Player to your computer, and locate **"MP3"**.
- Drag or copy the files as shown below (do not drag or copy files into the **"RECORD"** folder).

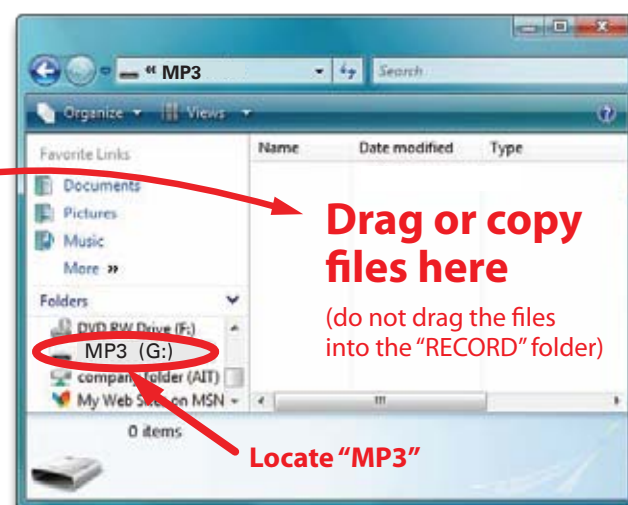

When you are done, disconnect your MP3 Player from the computer using the **"Safe Device Removal"** utility in the taskbar.

**NOTE:** Screenshots above may be slightly different than your computer's operating system.

- To play music, select **"music"** from the main menu and press the **[M]** button to confirm. The music playback screen will be displayed.
- Use the **[⏮]** or **[⏭]** button to select a track then press the **[⏸]** button to start playing the selected track.

**i** To browse music files on the player, refer to **"music menu 2"** – then search in **Local folder (player)** or **Card folder (Micro SD card)**.

### Music controls (playback screen)

- [M]** access music menus 1 and 2 / press and HOLD for main menu / confirm volume level
- [⏮]** previous track / rewind (press and HOLD) / decrease volume
- [⏸]** play music / pause music
- [⏭]** next track / fast forward (press and HOLD) / increase volume
- [VOL]** open the volume menu

### Volume

To adjust the music volume, press the **[VOL]** button to open the volume menu, then use the **[⏮]** or **[⏭]** buttons to adjust the volume, then press the **[M]** button to confirm the level and return to the music playback screen.

### Music controls (menu 1 and menu 2)

- [M]** confirm selection / press and **HOLD** for main menu
- [⏮]** moves the selection up
- [⏸]** return to music playback screen
- [⏭]** moves the selection down

### Music menu 1

- While music is **PLAYING**, press the **[M]** button to access music menu 1 where you can select from the following options:

**Repeat** – track repeat options  
**Equalizer** – select music type  
**SRS WOW** – adjust sound field  
**Replay mode** – track loop options  
**Exit** – exit to music playback screen

- Press the **[M]** button to confirm your choice.

### Music menu 2

- While music is **PAUSED**, press the **[M]** button to access music menu 2 where you can select from the following options:

**Local folder** – browse music files on the player  
**Card folder** – browse music files on the Micro SD Card  
**Delete file** – delete a single music file  
**Delete all** – delete all music files  
**Exit** – exit to music playback mode

- Press the **[M]** button to confirm your choice.



